

Preface

Purpose of the operating instructions

These operating instructions contain information based on the requirements for mechanical engineering documentation. This information relates to the location, transport, storage, mounting, use and maintenance.

These operating instructions are intended for:

- Users
- Commissioning engineers
- Maintenance personnel

Observe especially the information in the "Safety instructions" (Page 21) section.

You can find more information in the TIA Portal Information System.

Basic knowledge required

General knowledge of automation technology and process communication is needed to understand the operating instructions. Knowledge of personal computers and Microsoft operating systems is required.

Scope of the operating instructions

The operating instructions apply to the following HMI devices in conjunction with the SIMATIC WinCC Unified V18 software or higher:

Name	Type	Article number, device with Siemens logo	Article number, device without Siemens logo
MTP700 Unified Comfort	7" device	6AV2128-3GB06-0AX0	6AV2128-3GB36-0AX0
		6AV2128-3GB06-0AX1	6AV2128-3GB36-0AX1
MTP1000 Unified Comfort	10" device	6AV2128-3KB06-0AX0	6AV2128-3KB36-0AX0
		6AV2128-3KB06-0AX1	6AV2128-3KB36-0AX1
MTP1200 Unified Comfort	12" device	6AV2128-3MB06-0AX0	6AV2128-3MB36-0AX0
		6AV2128-3MB06-0AX1	6AV2128-3MB36-0AX1
MTP1500 Unified Comfort	15" device	6AV2128-3QB06-0AX0	6AV2128-3QB36-0AX0
		6AV2128-3QB06-0AX1	6AV2128-3QB36-0AX1
MTP1900 Unified Comfort	19" device	6AV2128-3UB06-0AX0	6AV2128-3UB36-0AX0
		6AV2128-3UB06-0AX1	6AV2128-3UB36-0AX1
MTP2200 Unified Comfort	22" device	6AV2128-3XB06-0AX0	6AV2128-3XB36-0AX0
		6AV2128-3XB06-0AX1	6AV2128-3XB36-0AX1